




HP Mini 110-3735dx RAM Replacement

Replacing the RAM (memory) of your HP Mini 110-3735dx.

Written By: Tyrone Williams

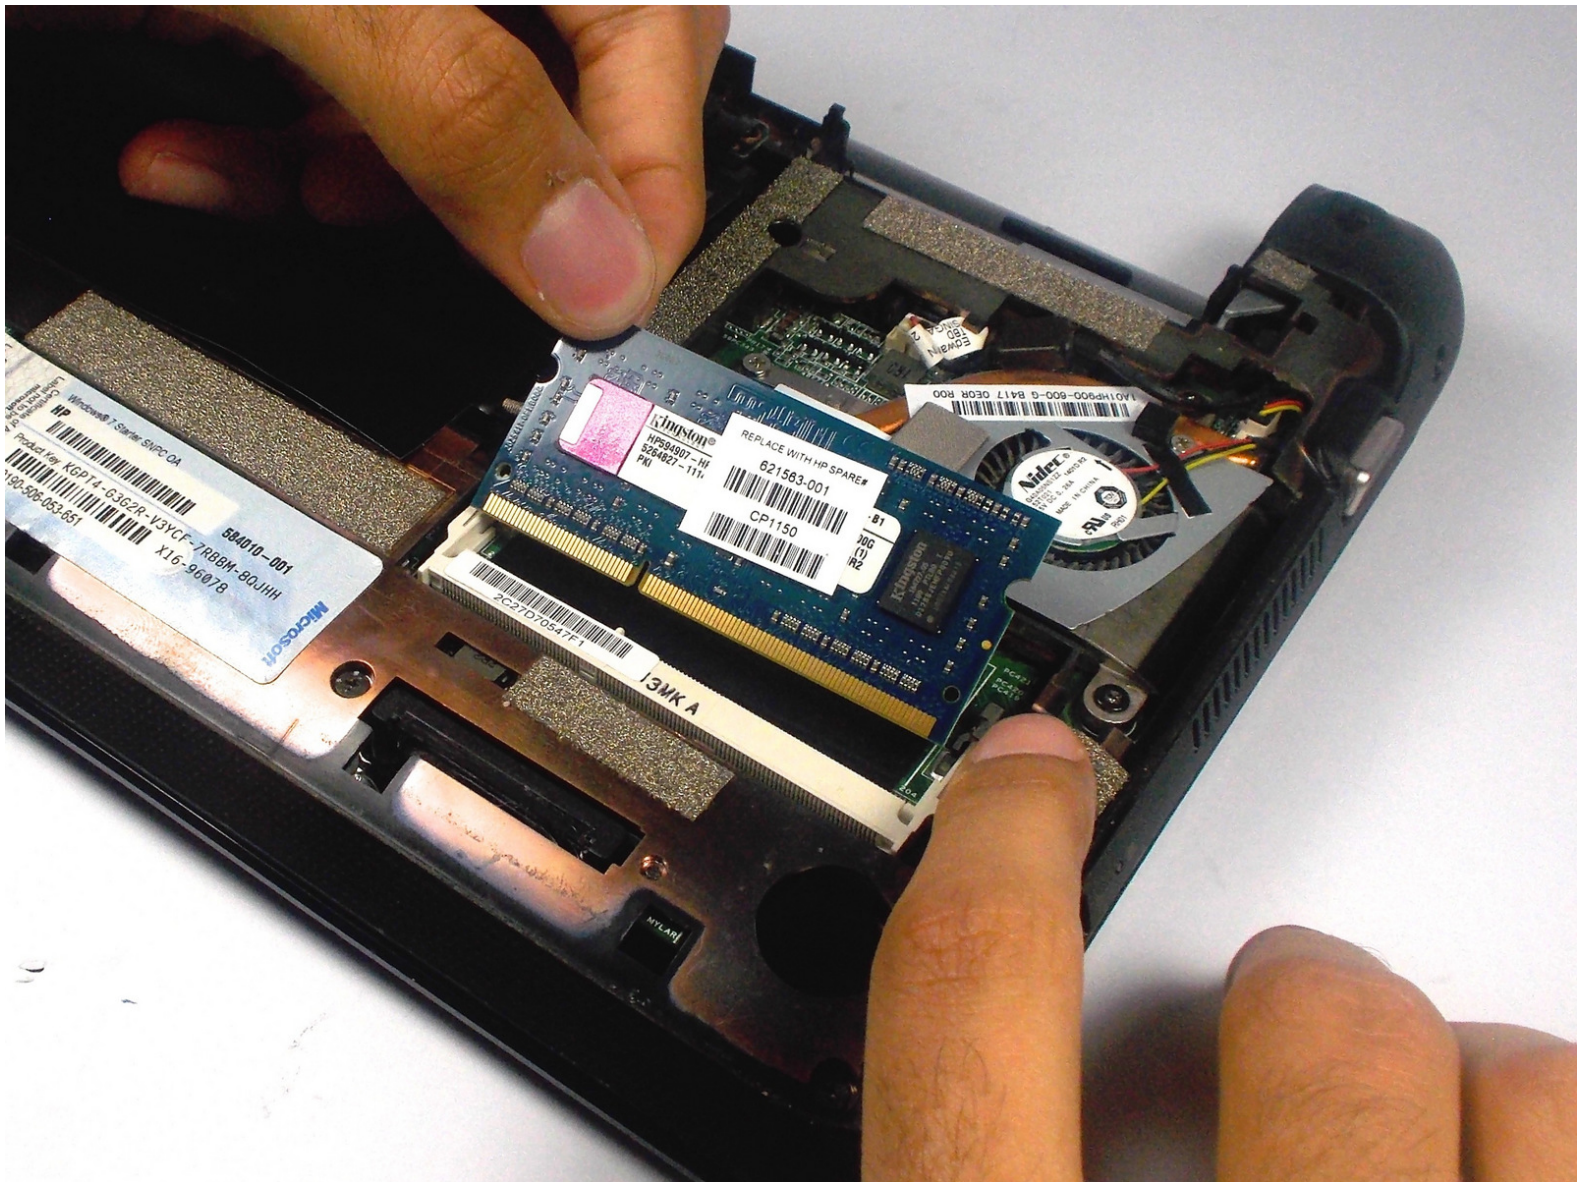

INTRODUCTION

If your computer is running slow, has had blue screen of death, or you want to upgrade your HP Mini, follow this guide for replacing your RAM.

Step 1 — Battery



- With the bottom of the HP Mini facing up, slide both switches inward towards each other.

Step 2



- With the left switch still pushed inward, pull the battery towards you to remove it from the computer.


Step 3 — Backcover



- Pull upward from under the back cover via the missing battery area.



i Best to start from one of the corners.

Step 4 — RAM

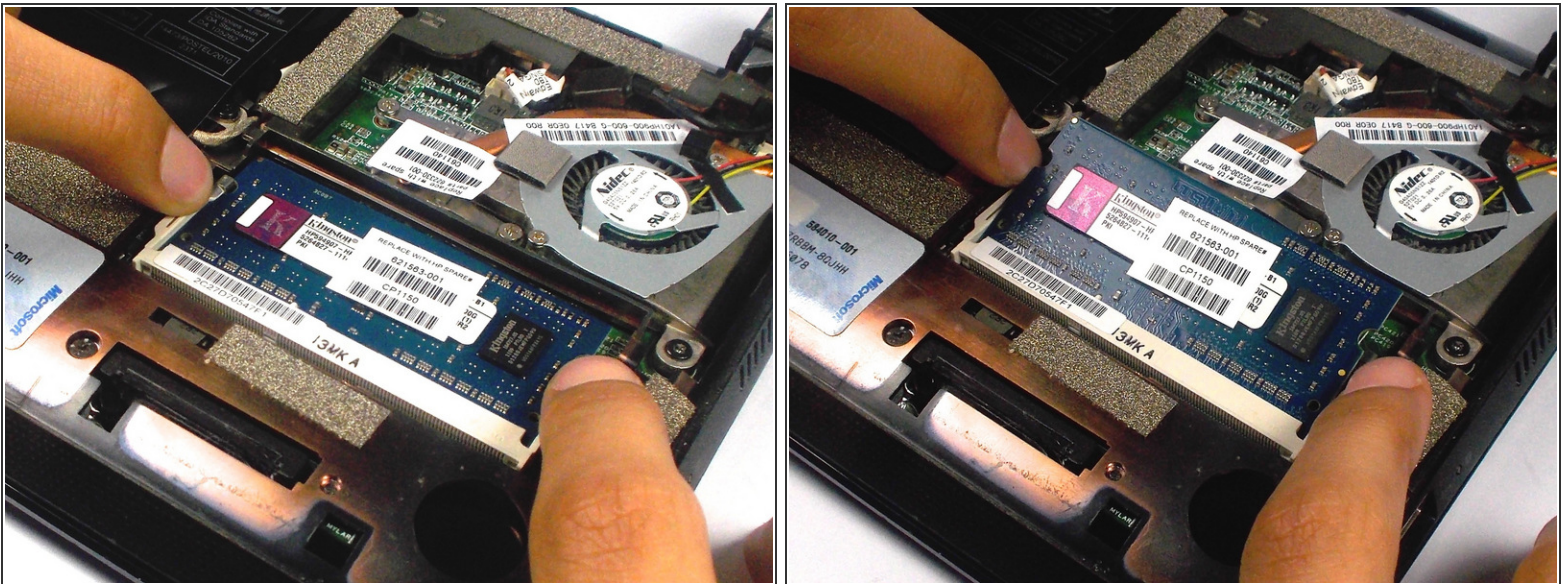

- Push the two white holders holding the RAM outward until it points upwards at about a 45 degree angle.

Step 5

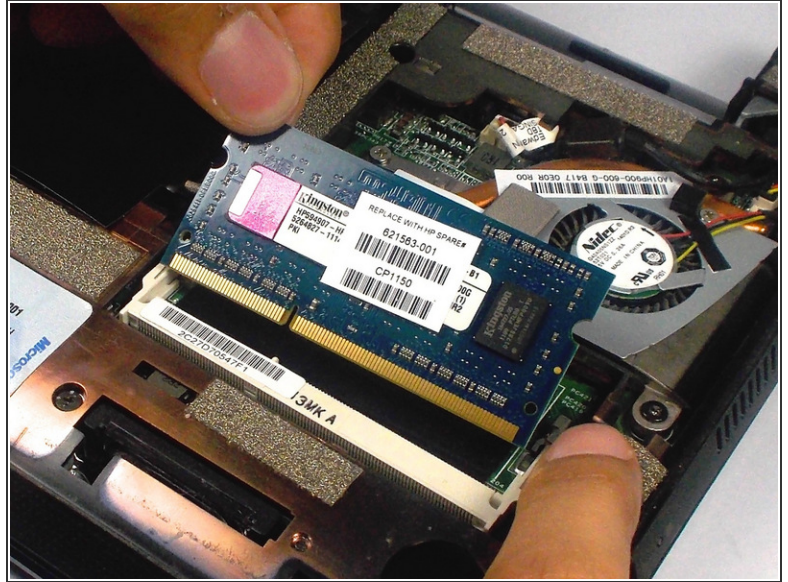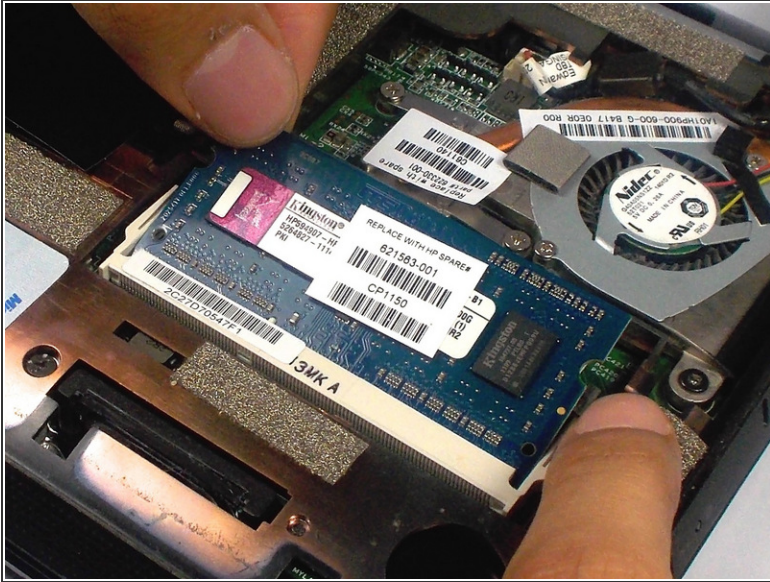

- Gently pull the RAM from it's socket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 04:31:23 AM.